

Tipps

- // There is no need to press the kitchen backsplash firmly into the joints or grooves. It will stick on its own. Do not smooth it out with a squeegee: Because the material is rigid, most of the air will escape on its own. The adhesive activates under pressure, so do not press it down too firmly right away; just apply it loosely.
- // Full adhesive strength is achieved after 24 hours. After wet installation, the adhesive will set as soon as the water has evaporated. If it comes loose on its own, too much dish soap was used (wet installation). In that case, secure the kitchen backsplash from the front and wait a few days.
- // To achieve a perfectly smooth, mirror-like surface, any unevenness should be smoothed out as needed. You can smooth out rough grooves and edges in advance using Fugofill (removable).
- // Cleaning: Plastic is more sensitive to scratches than glass or ceramic. To ensure you enjoy your back splash for years to come, here's our recommendation: Clean the kitchen backsplash with a sponge (not microfiber) and a little dish soap. Use clean cleaning cloths and avoid applying too much pressure.
- // We recommend the following tools: Dahle 50010 scissors, the Olfa L5 utility knife (for electrical outlets) and Tesa Premium CLASSIC masking tape. If you can't cut out the outlet after scoring it 2-3 times, the utility knife is too dull! (See the video "Perfect Cut Edges")
- // First, try it out loosely on the wall (leaving the protective film on the back) to see where there might be "problem areas."



Ideal for rental apartments:

Removable, for use on tile surfaces.

Want to quickly remove the kitchen backsplash when you move?

Then you can attach it using our removable "tile protection film." To do this, first apply the film underneath. Then attach the Premium kitchen backsplash on top of it. The amount of "tile protection film" you need depends on the length of the backsplash. Please note that this solution should only be used on completely smooth surfaces such as tiles or glass. We recommend doing an adhesion test beforehand with a small piece of "tile protection film": If it falls off almost on its own, our "tile protection film" is not necessary. Just give it a try.

SCAN ME




Order Link

Our PRO version, which uses a weaker adhesive, is removable

If you decide to switch to the PRO version (matt), which can be removed from tiles, we'll be happy to exchange it for you free of charge.

Premium Kitchen Backsplash · Manufacturer Information & Contact Person
 StickerProfis Hubertus Pohlmann e.K. · Am Siedenkamp 31 · D-21640 Bliedersdorf
stickerprofis.de/contact

Current Examples of our customers

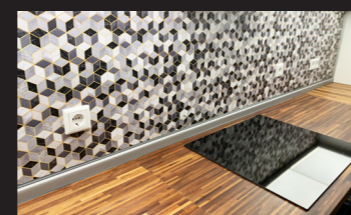

Share your experiences with the "Kitchen Backsplash" project with us and join the community. Also on Instagram: #stickerprofis

Get gluing! It's fun!

- // Quick and easy to apply
- // Video tutorials to help you easily follow the steps
- // Sticks to any surface *: woodchip wallpaper, plaster, tile, concrete, drywall, paint
- // No special tools are required for bonding
- // Cut with sharp scissors
- // Easy to clean

*See the detailed substrate chart / restrictions on the website

My kitchen backsplash.

Important instructions for use and safety precautions:

Please note the following in advance!



- // The goods must be inspected for damage and defects before processing.
- // Before processing, note the orientation of the image (e.g., the shadows on the stones are at the bottom).
- // Be careful not to scratch the surface at any point during the process
- // The edges of cut surfaces may be sharp—risk of cuts
- // When installing the backsplash on dry surfaces using a dry-mount method, it should fit properly on the first try – it's best to position it beforehand without removing the protective film on the back.
- // For water- and stain-resistant surfaces (e.g., latex/silicate paint, elephant skin), sealed vinyl/fiberglass/lacquer/metal/foam wallpaper, raw wood, freshly plastered walls, and chalking paint, check adhesion beforehand. Good to know: Many problematic surfaces can be improved in advance from "poor adhesion" to "good adhesion." See the online tip (QR code) for more information.
- // When working on freshly plastered walls, be sure to use a primer and ensure the surface is free of dust.
- // Please observe the safety clearance specified by the cooktop manufacturer between the outer edge and the wall. For example, this is 5 cm. Do not place the glass top in front of intense heat sources.
- // Please note that when using pots, kettles, etc., the opening from which steam escapes should not be constantly directed toward the kitchen backsplash.
- // Please observe the safety distance from walls specified by manufacturers of toasters, deep fryers, etc.

SCAN ME



Substrate

Another important point:

- // Unroll the kitchen backsplash and let it settle overnight.
- // If using a light-colored design on dark grout, paint the grout white beforehand if necessary.
- // Not suitable for gas stoves and ovens with a rear vent (rare).
- // Carefully peel off the protective backing without damaging the adhesive.

Installation Instructions for the PREMIUM Kitchen Backsplash



1. Measure First, you'll need to measure the area for your kitchen backsplash.
2. Take out the fuses! Before you remove the outlet covers.

SCAN ME
Video Tutorial




Perfectly clean cuts
with Dahle scissors and a craft knife

To help you get the **best results**, we've created a simple step-by-step **guide** for installing your kitchen backsplash. Prefer to **improvise**? It usually turns out **perfectly** without reading the full guide.

3. Measure and cut out the sockets

It's really easy: First measure, then mark, and finally cut out.

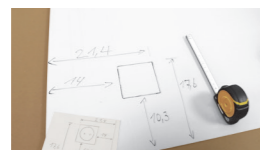

SCAN ME



Video Tutorial

4. Preparing the surface for wet bonding

SCAN ME

Video Tutorial



If you're applying the backsplash to very smooth surfaces such as tiles, glass, or tile protection film, you'll need to dampen the surface **just before applying** it with a thin film of water (without large droplets): Moisten a cloth with soapy water (don't use too much dish soap, or it won't stick and will fall off again). This way, when applying the backsplash to smooth surfaces, you can reposition or remove it.

5. Finish

SCAN ME

Help Link



Wall corners: Cut the kitchen backsplash to size and butt-joint the pieces here. If desired, use a neutral-curing silicone sealant or a color-matched corner trim from a hardware store.

Are you installing the kitchen backsplash on your own?

We'll show you how to do it.

SCAN ME



Video Tutorial




A. Removing the protective film on the back

Carefully score the white protective film on the back in vertical strips about 20 cm wide using a utility knife.

Caution: Do not cut into the white adhesive layer or cut too deeply. Otherwise, it will show through on the printed side.

B. Assembly

- B1 / Use painter's tape to secure the kitchen backsplash in the desired position.
- B2 / Peel off the first strip from the back and press it down gently. Then peel off the second strip and press it down gently again.
- B3 / Work your way slowly toward the end of the backsplash. Then continue as described in step **5. Finish**

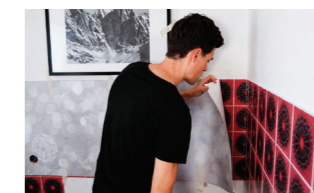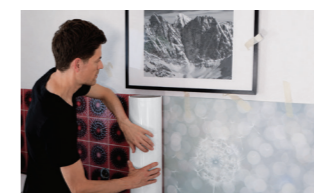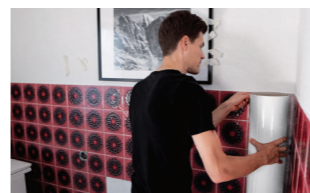

Are there two or three of you?

Here's how to get there quickly.

SCAN ME



Video Tutorial

A. Preparation as described in steps 1, 2, 3, and 4

B. Assembly

- B1 / Watch the video tutorials, which show practical solutions from our customers.
- B2 / Place the kitchen backsplash upright on the countertop. Peel back the white (or red) protective film on the back about 10 cm at the start and press the adhesive side against the wall.
- B3 / One person should now slowly and steadily peel back the protective film a little further while holding the backsplash away from the wall. The second person should press it lightly against the wall. Avoid severe creasing. Work your way forward slowly in the direction of installation. **5. Finish**

