


Tipps


- // There is no need to press the kitchen wall covering firmly into the joints or grooves. It will adhere even without doing so. Do not smooth it out with a Squeegee.
- // Full adhesive strength is achieved after 24 hours. After wet installation, the adhesive will set as soon as the water has evaporated. If it comes loose on its own, too much dish soap was used (wet installation). In that case, secure the kitchen backsplash from the front and wait a few days.
- // You can smooth out rough grooves and edges in advance using Fugofill (removable). To achieve a perfectly flat surface, any unevenness should be prepped as needed.
- // Cleaning: Plastic is more susceptible to scratches than Glass or ceramic. To ensure you enjoy your kitchen backsplash for many years to come, here's our recommendation: Clean the kitchen backsplash with a sponge (not microfiber) and a little dish soap. If desired, dry it with a terry cloth towel. Use clean cleaning cloths and avoid applying too much pressure.
- // We recommend the following tools: a pair of sharp Dahle 50010 scissors, an Olfa L5 utility knife (for electrical outlets), and Tesa Premium CLASSIC masking tape.
- // First, try it out loosely on the wall (leaving the backing film on) to see where there might be "problem areas."

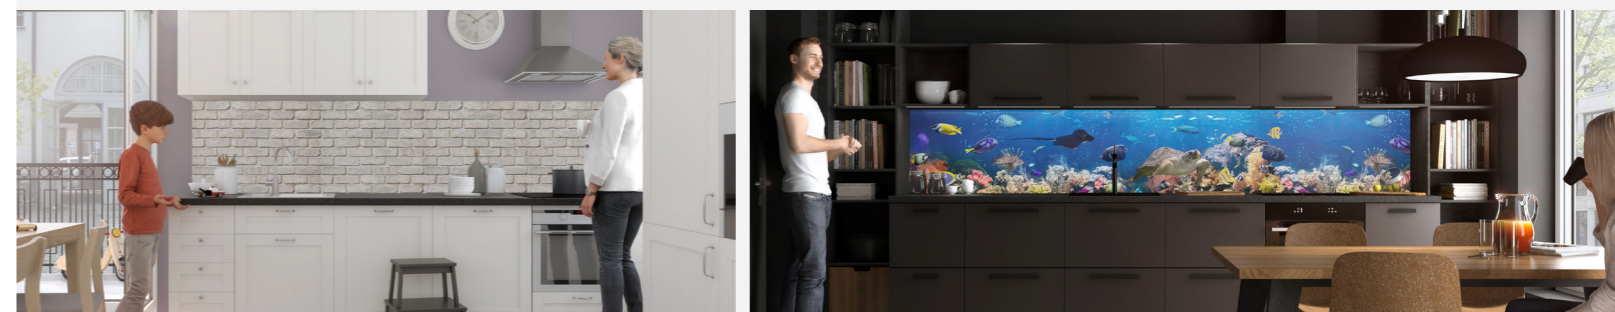

Substrates: Overview & Notes

Substrate type	Suitability	Always check the liability clause first, and:
Finish plaster, fine-grit joint compound, drywall, smooth wall-mounted Glass fiber mesh	✓	Clean until free of dust and sand If necessary, prime with an adhesive primer (test first)
Painted wall	✓	A smooth wall painted with the appropriate paint
Painted surface	✓	Wet bonding
Tiles	✓	Wet bonding
Glass	✓	Wet bonding
Aluminum Dibond, Plexiglass	✓	Wet bonding
MDF board	✓	If necessary, use a primer
Textured wallpaper	?	It might work. However, we recommend our PREMIUM version, which was developed specifically for this purpose. Use mounting adhesive if necessary.
OSB board, raw wood		
Scratch-coat/spray-coat plaster		On very coarse plaster (grain size 2-5 or larger), the product adheres only to the surface. As a result, its adhesive strength is automatically reduced to just 5-10%. If necessary, fill the gaps with installation adhesive.
Waterproofing coatings, latex paint, elephant skin		Special coatings are designed to prevent anything from sticking to the surface.
Glass fiber, metal, foam non-woven, vinyl, and lacquer wallpaper		Embossed specialty wallpapers often have a sealant applied to them: this is designed to prevent anything from sticking to the surface. Restore the surface's adhesion by sanding it lightly with 100-grit sandpaper.
Greasy / dirty surface		e.g., old wallpaper, home where people smoke
Loose substrate, chalking paint		e.g., loose plaster, peeling paint, decorative paint with a highly chalky texture, clay plaster

Aktuelle Beispiele unserer Kunden

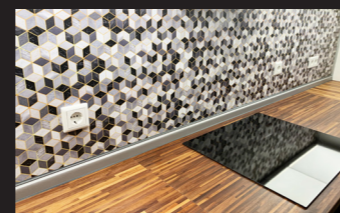

Schreibe uns deine Erfahrungen mit dem Projekt „Küchenrückwand“, werde Teil der Community. Auch auf Instagram: #stickerprofis

Let's get gluing! It's fun!

- // Quick and easy to apply, can be repositioned without leaving residue
- // Video tutorials to help you follow the steps easily
- // Sticks to just about anything*: tiles, fine plaster, drywall, smooth painted walls...
- // Heat-resistant & easy to clean
- // Removable without leaving residue
- // Cut to size with sharp scissors

*See the detailed substrate chart / restrictions on the website

My kitchen backsplash.

Important instructions for use and safety precautions:

Please note the following in advance!



- // Inspect the product for damage and defects before installation.
- // Before installation, note the orientation of the design (e.g., shadows on stones are at the bottom).
- // Take care not to scratch the surface during the entire installation process.
- // The edges of cut pieces may be sharp—risk of cuts
- // Clean the substrate before applying the adhesive, otherwise the adhesive will adhere to the dirt rather than the wall.
- // The enclosed substrate overview serves as a helpful guide and reflects our experience over the past 6 years. Important to note: "Plaster" is not always the same as "plaster," and "paint" is not always the same as "paint." Adhesion depends on many factors and may vary from case to case. Please thoroughly inspect the specific situation on-site yourself and carry out all necessary preparatory work. We have linked an easy-to-understand guide via the QR code that shows how to proceed safely. Since we cannot account for every scenario: This guide is not exhaustive.
- // Please observe the safety distance from the outer edge to the wall specified by the cooktop manufacturer. For example, this is 5 cm.
- // Not suitable for gas stoves and ovens with a rear vent (rare).

SCAN ME



Underground

Dry installation on paint or plaster:

Please note that repeated peeling may cause mortar and paint residue to come off as well and settle on the adhesive layer. This results in a significant reduction in adhesive strength.

Küchenrückwand Pro · Manufacturer Information & Responsible Person:

StickerProfis Hubertus Pohlmann e.K. · Am Siedenkamp 31 · D-21640 Bliedersdorf
stickerprofis.de/contact

Installation Instructions for the PRO Kitchen Backsplash



1. Measure First, you'll need to measure the area for your kitchen backsplash.
2. Take out the fuses! Before you remove the outlet covers.

SCAN ME

Video Tutorial





Perfectly clean cuts
with Dahle scissors and a craft knife

To help you get the **best results**, we've created a simple step-by-step **guide** for installing your kitchen backsplash. Prefer to **improvise**? It usually turns out **perfectly** without reading the full guide. through the whole guide.

3. Measure and cut out the sockets

It's really easy: First measure, then mark, and finally cut out.

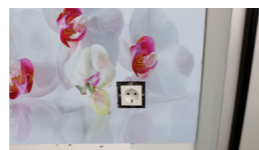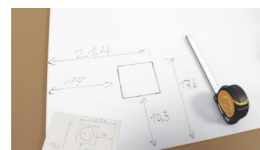

SCAN ME



Video Tutorial

4. Preparing the surface for wet bonding

SCAN ME

Video Tutorial



If you're applying the backsplash to very smooth surfaces such as tiles, glass, or tile protection film, you'll need to dampen the surface **just before applying** it with a thin film of water (without large droplets): Moisten a cloth with soapy water (don't use too much dish soap, or it won't stick and will fall off again). This way, when applying the backsplash to smooth surfaces, you can reposition or remove it.

5. Finish

SCAN ME

Help Link



Wall corners: Cut the kitchen backsplash to size and butt-joint the pieces here. If desired, use a neutral-curing silicone sealant or a color-matched corner trim from a hardware store.

Are you installing the kitchen backsplash on your own?

We'll show you how to do it.

SCAN ME



Video Tutorial

A. Removing the protective film on the back

Carefully score the white protective film on the back in vertical strips about 20 cm wide using a utility knife.


Caution: Do not cut into the white adhesive layer or cut too deeply. Otherwise, it will show through on the printed side.

B. Assembly

B1 / Use painter's tape to secure the kitchen backsplash in the desired position.

B2 / Peel off the first strip from the back and press it down gently. Then peel off the second strip and press it down gently again.

B3 / Work your way slowly toward the end of the backsplash. Then continue as described in step **5. Finish**

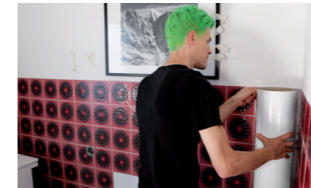

Are there two or three of you?

Here's how to get there quickly.

SCAN ME



Video Tutorial

A. Preparation as described in steps 1, 2, 3, and 4

B. Assembly

B1 / Watch the video tutorials, which show practical solutions from our customers.

B2 / Place the kitchen backsplash upright on the countertop. Peel back the white (or red) protective film on the back about 10 cm at the start and press the adhesive side against the wall.

B3 / One person should now slowly and steadily peel back the protective film a little further while holding the backsplash away from the wall. The second person should press it lightly against the wall. Avoid severe creasing.

Work your way forward slowly in the direction of installation.

5. Finish

